



# INSTALLATION INSTRUCTIONS FOR MODEL 436

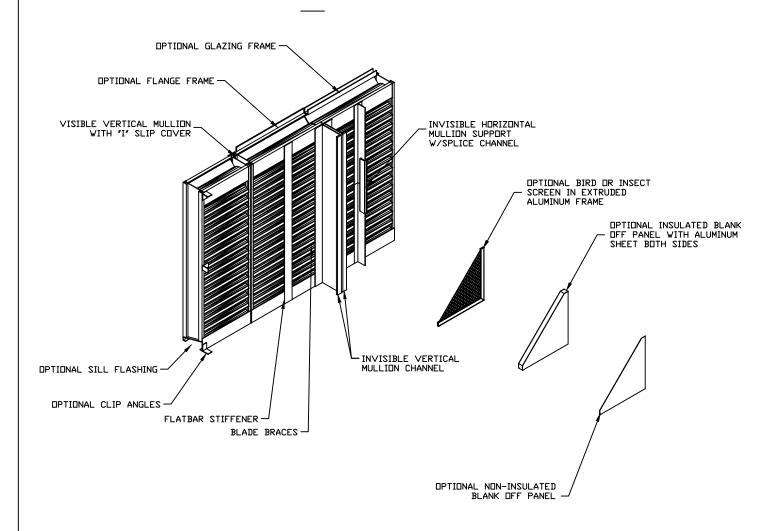

- READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION
- USE THESE INSTRUCTIONS IN CONJUNCTION WITH INDUSTRIAL LOUVERS SHOP DRAWINGS


## STEP 1

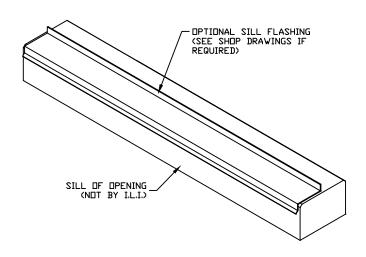

HEAD AND JAMBS ARE NOT SHOWN FOR CLARITY

## INSTALLING SILL FLASHING

- LOCATE IF SILL FLASHING IS REQUIRED PER SHOP DRAWINGS.
- ATTACH APPLY CAULK (NOT BY I.L.I.) TO SILL OF OPENING SET SILL FLASHING IN CAULK.

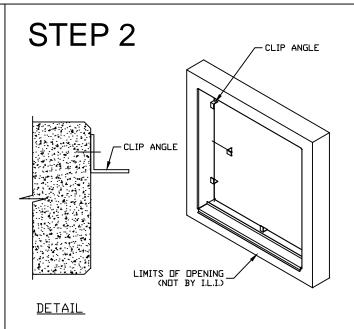


## **INSTALLING CLIP ANGLES**


- REFER TO SHOP DRAWINGS FOR SIZE AND DETAILS OF CLIP ANGLES.
- MEASURE SET BACK PLACEMENT OF CLIP ANGLES, AND DRILL HOLES INTO WALL.
- ATTACH CLIP ANGLES TO WALL. (ALL ANCHORS TO SURROUNDING CONDITIONS ARE NOT SUPPLIED BY I.L.I.)

# STEP 3

## **INSTALLING LOUVER**

- 1. PLACE LOUVER SECTION INTO OPENING.
- SHIM AROUND LOUVER TO CREATE PROPER DISTANCE FROM SURROUNDING CONDITIONS. (SEE SHOP DRAWINGS FOR DETAILS)
- 3. ONCE PROPER PLACEMENT IS ACHIEVED. USE HOLES IN CLIP ANGLES TO DRILL PILOT HOLES IN JAMB, HEAD AND SILL.
- FASTEN CLIP ANGLES TO LOUVERS WITH FASTENERS AS PROVIDED BY I.L.I.

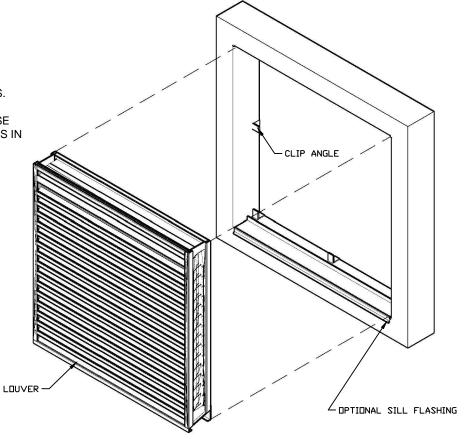

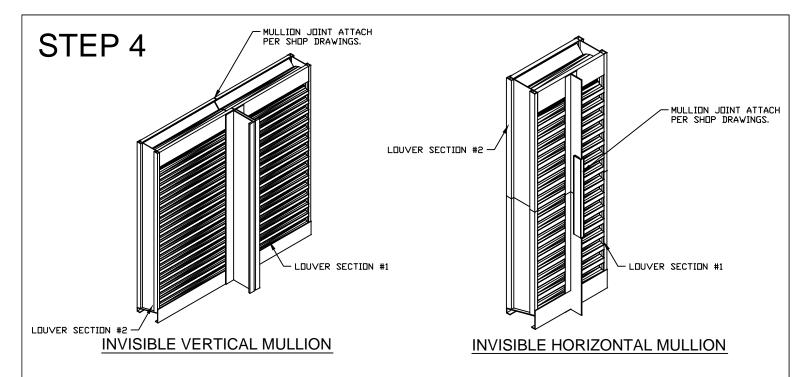

## **INSTALLING MULTI-SECTION LOUVERS**

- 1. IF LOUVER IS SINGLE SECTION SKIP TO STEP 5.
- 2. IF LOUVER IS MULTI-SECTION INSTALL SECTION #1 AS PER STEP 1-3.
- 3. PUT SECTION #2 IN OPENING FOLLOWING STEPS 1-3. MAKING SURE SECTION #1 ALIGNS WITH SECTION #2.
- 4. ATTACH MULLION JOINT PER SHOP DRAWINGS.
- 5. CONTINUE PROCESS UNTIL ALL SECTIONS ARE INSTALLED.

## STEP 5

